 








Thank you for purchasing the **MODWAY TV STAND** !

Before you start, here are some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the TV Stand, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.

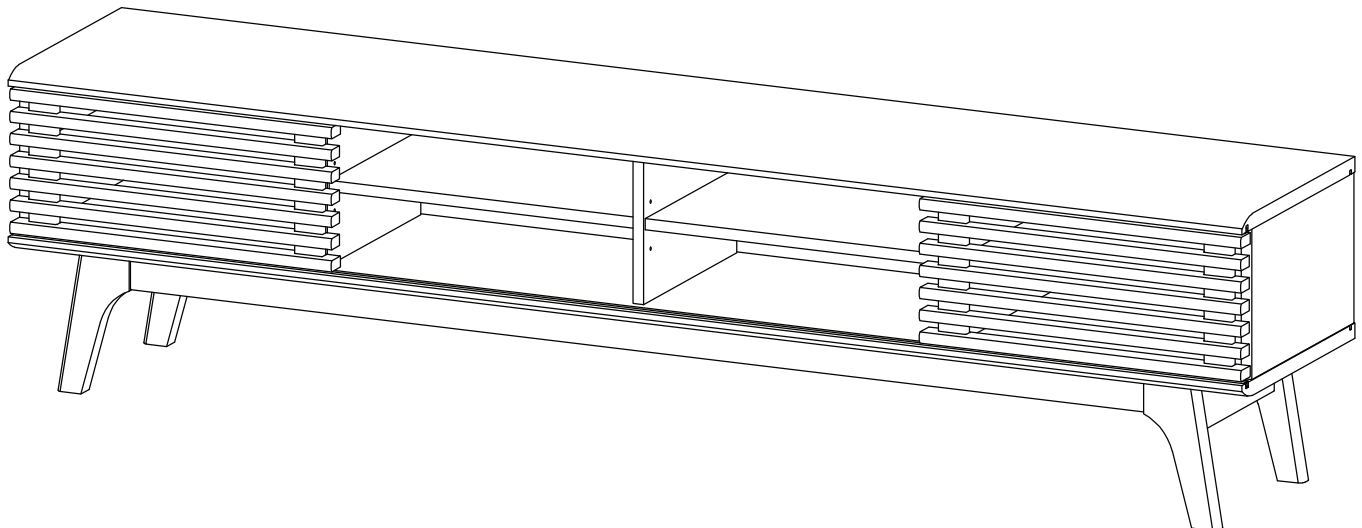

      Hardware :


A) Cambolt/Metal  $\varnothing$ 6 x 35 mm x 11	B) CamLock /Metal  $\varnothing$ 15 mm x 11	C) Dowel /Wood  $\varnothing$ 8 x 30 mm x 40	D) Screw/Metal  5.5 x 35 mm x 4	E) Screw/Metal  5.5 x 45 mm x 4
F) Shelf Pin/Metal  $\varnothing$ 5 x 15 mm x 16	G) Screw/Metal  M 3.5 x 15.5 mm x 12	H) Wedge/Plastic  9 x 14 x 10 mm x 12	I) Foam Pad/Spon  25 x 25 x 2 mm x 4	J) Screw Cup/Plastic  $\varnothing$ 15 mm x 7
K) Pin Sliding Top/Plastic  $\varnothing$ 8 x 19 mm x 4	L) Pin Sliding Bottom/Plastic  $\varnothing$ 8 x 16 mm x 4	M) Stoper/Plastic  42 x 14 x 8 mm x 2	N) Screw/Metal  M 7 x 50 mm x 7	O) Key/Metal  L 4 x 1
P) Anti-Deflection Bar/Metal  $\varnothing$ 8 mm x 1	Q) Buffer/Rubber  $\varnothing$ 8 mm x 1	R) Screw/Metal  M 6 x 12.5 mm x 14	S) Screwdriver (Not Include) 	


 
Components:

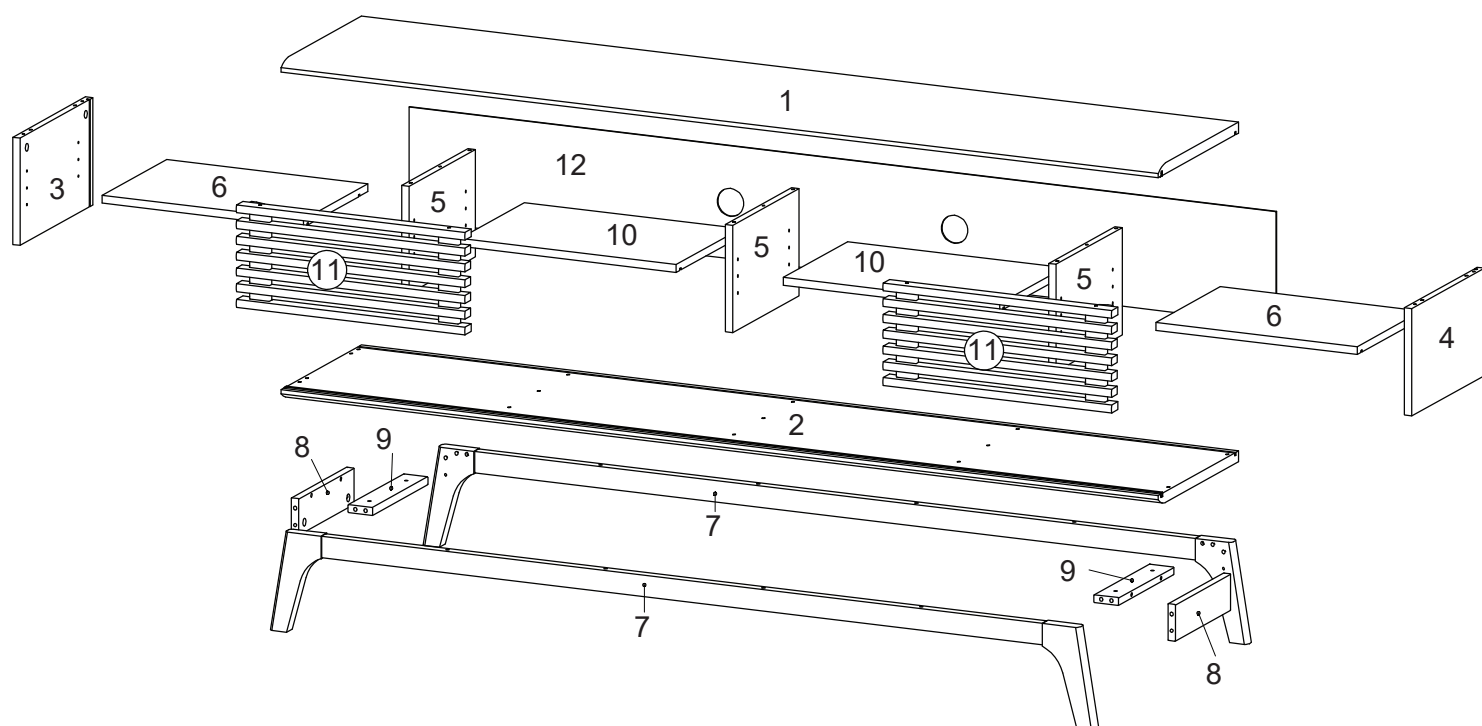

1	Top Board	x1	2	Bottom Board	x1	3	Side Board Left	x1	4	Side Board Right	x1
5	Centre Board	x3	6	Adjustable Small	x2	7	Assembly Leg	x2	8	Support Board 1	x2
9	Support Board 2	x2	10	Adjustable Big	x2	11	Frame Door	x2	12	Back Board	x1

  
 
STEP 1:

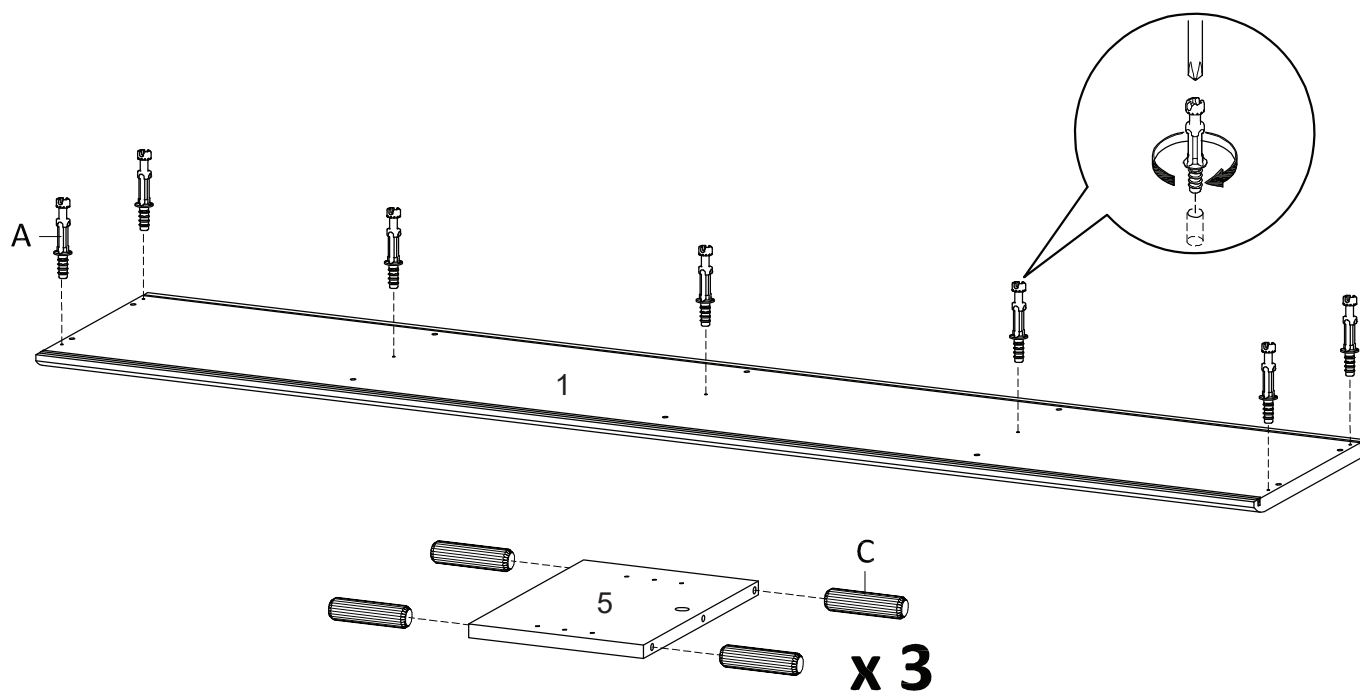


		
Ax7	Cx12	Sx1

Hardware required. Screwdriver not included

   
STEP 2:

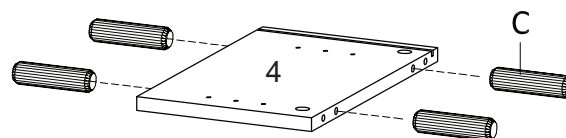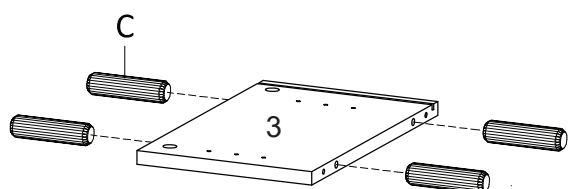


Cx8

Hardware required.

 
STEP 3:

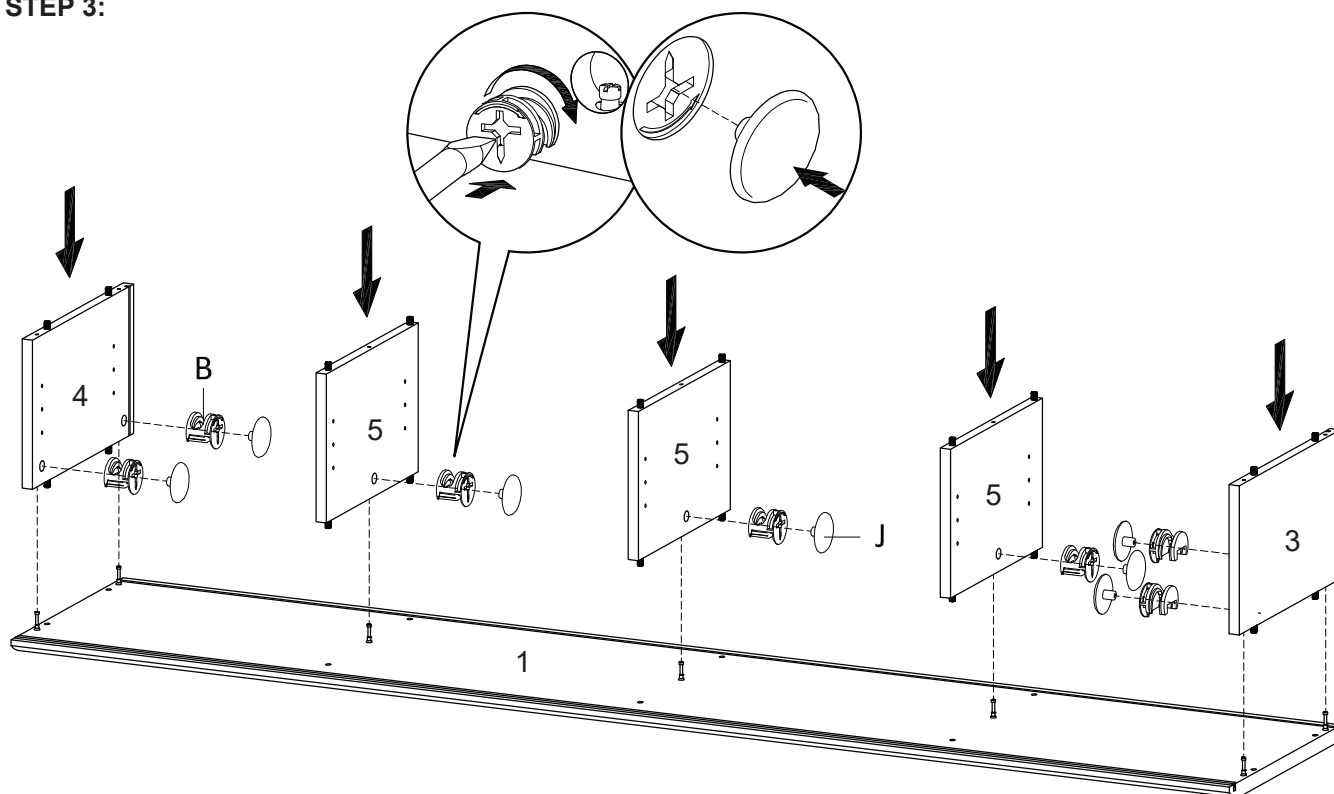

Bx7	Jx7	Sx1

Hardware required.
Screwdriver not included

 
STEP 4:

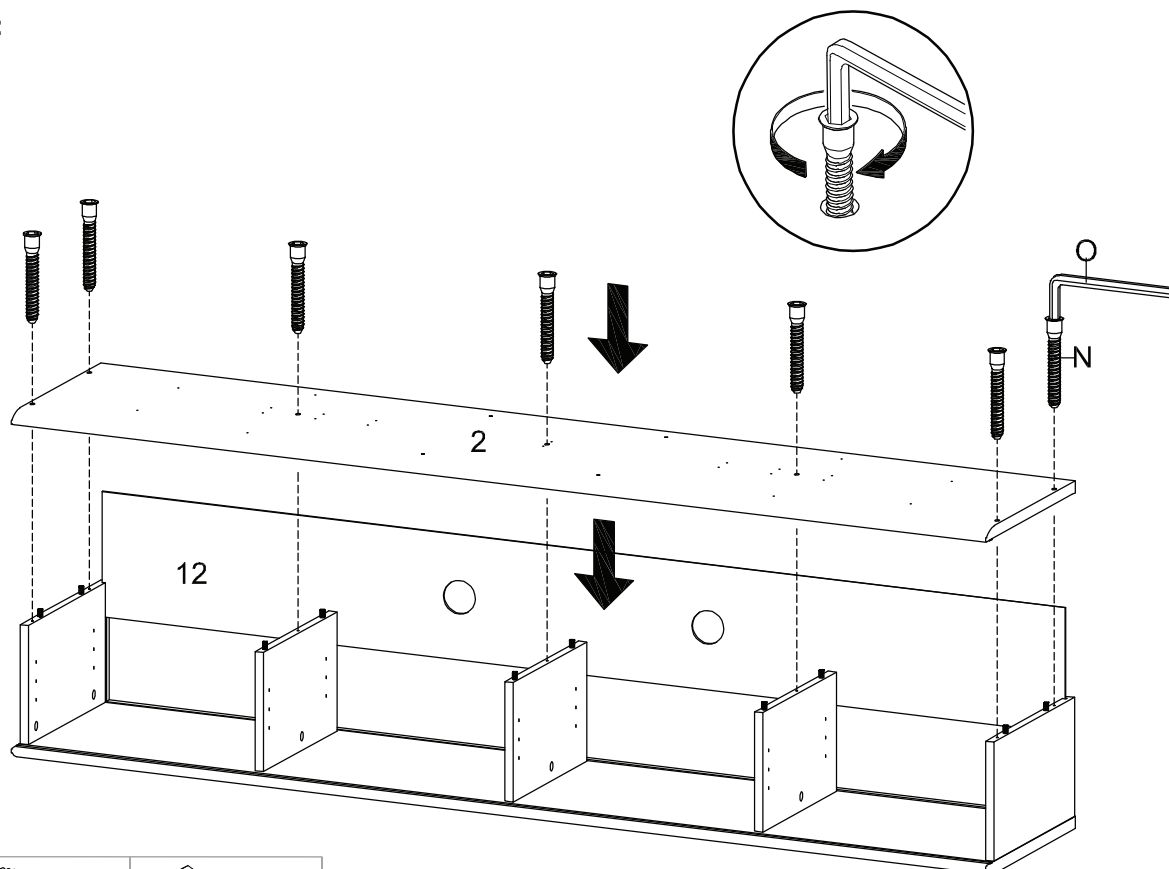

Nx7	Ox1

Hardware required.

 
STEP 5:

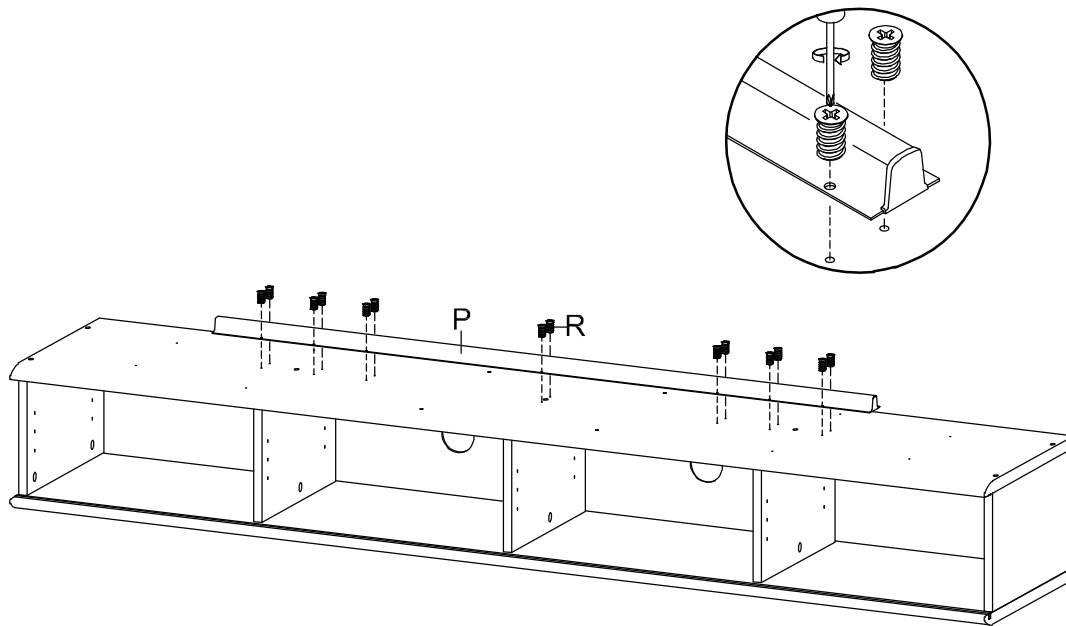


		
Rx14	Px1	Sx1

Hardware required.
Screwdriver not included

  
STEP 6:

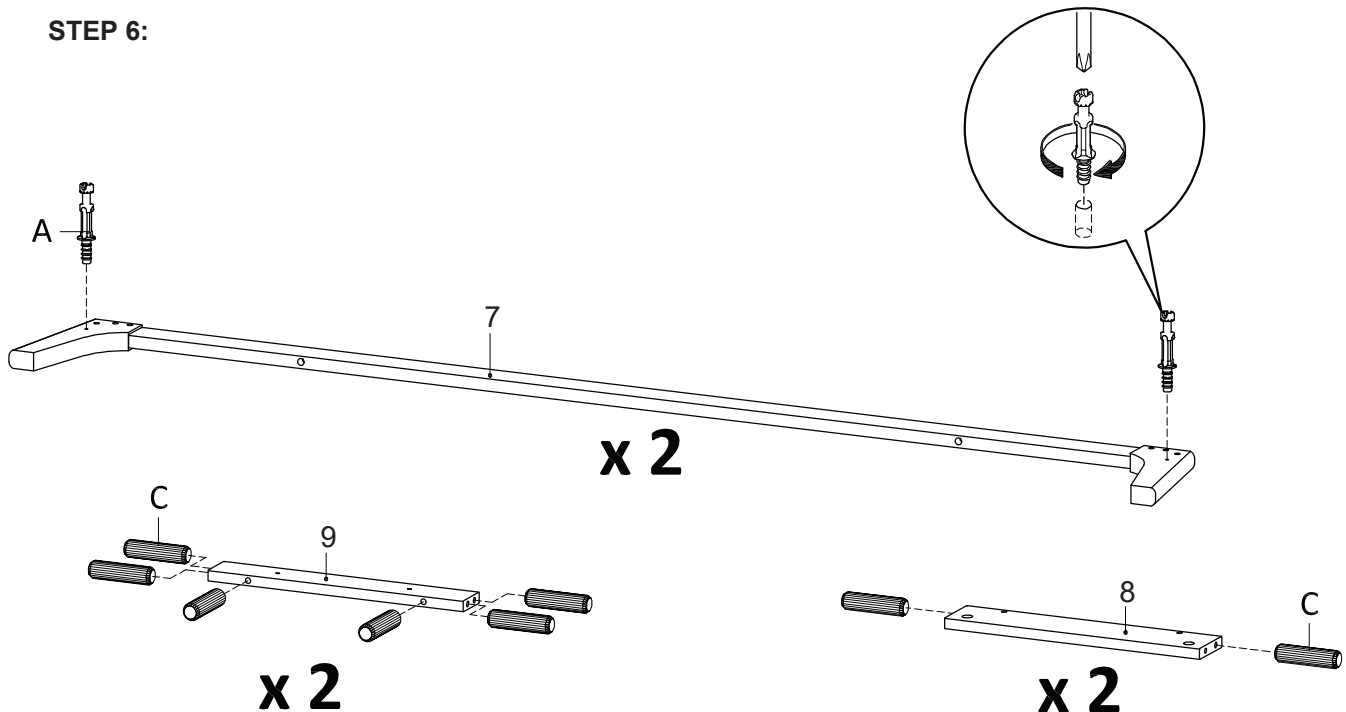


		
Ax4	Cx16	Sx1


Hardware required. Screwdriver not included

 STEP 7:

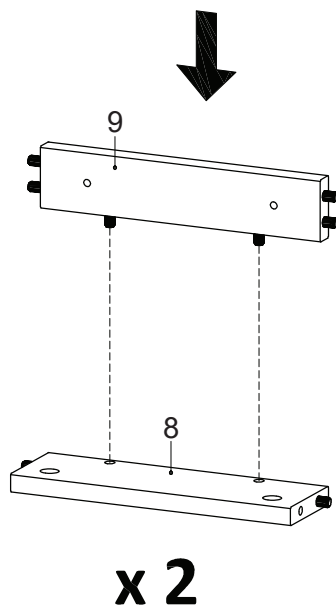

  
STEP 8:

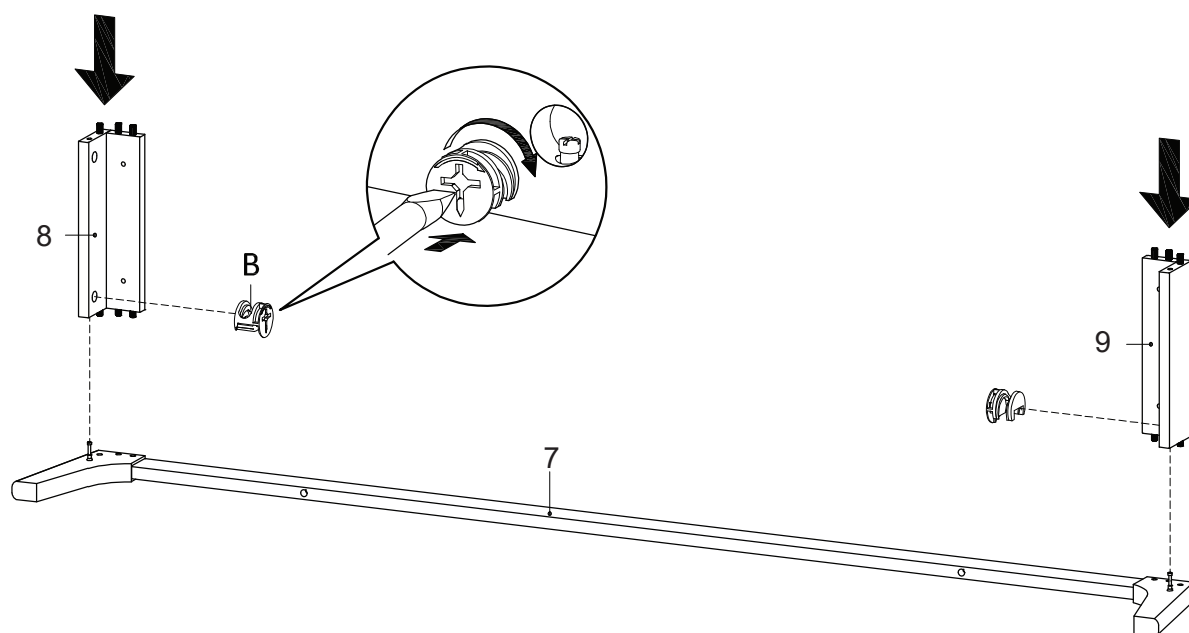


	
Bx2	Sx1

Hardware required. Screwdriver not included

  
STEP 9:

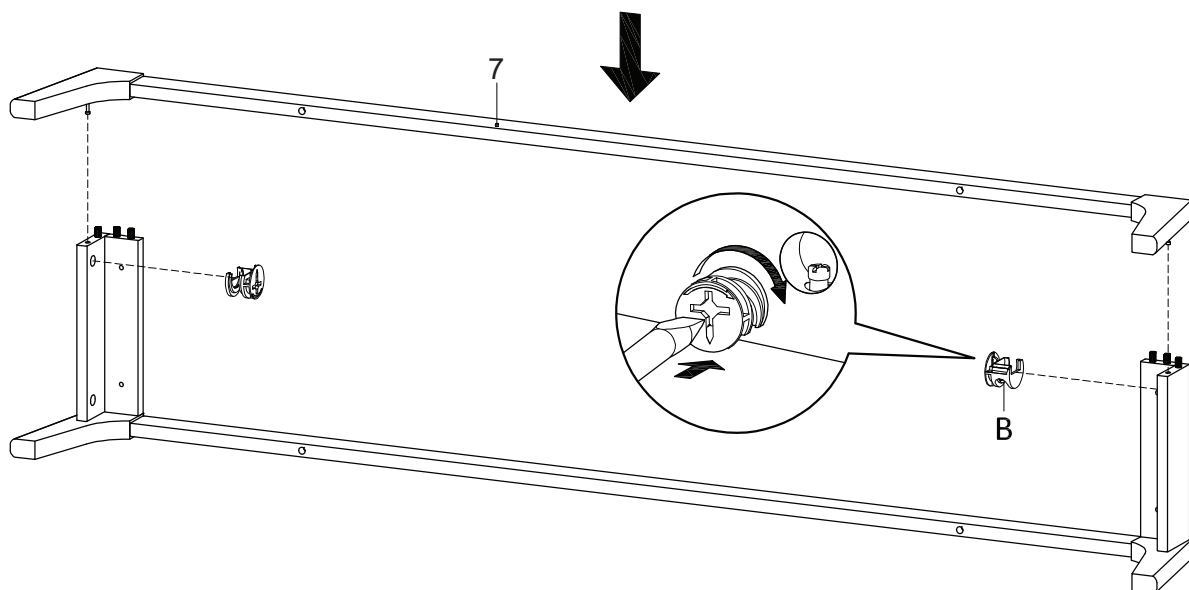

	
Bx2	Sx1

Hardware required. Screwdriver not included

 
STEP 10:


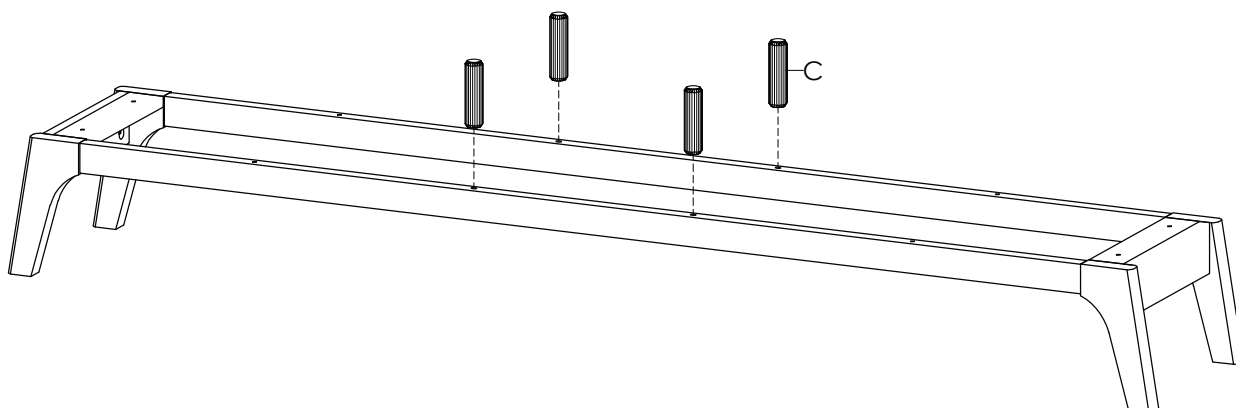



Cx4

Hardware required.

   
STEP 11:

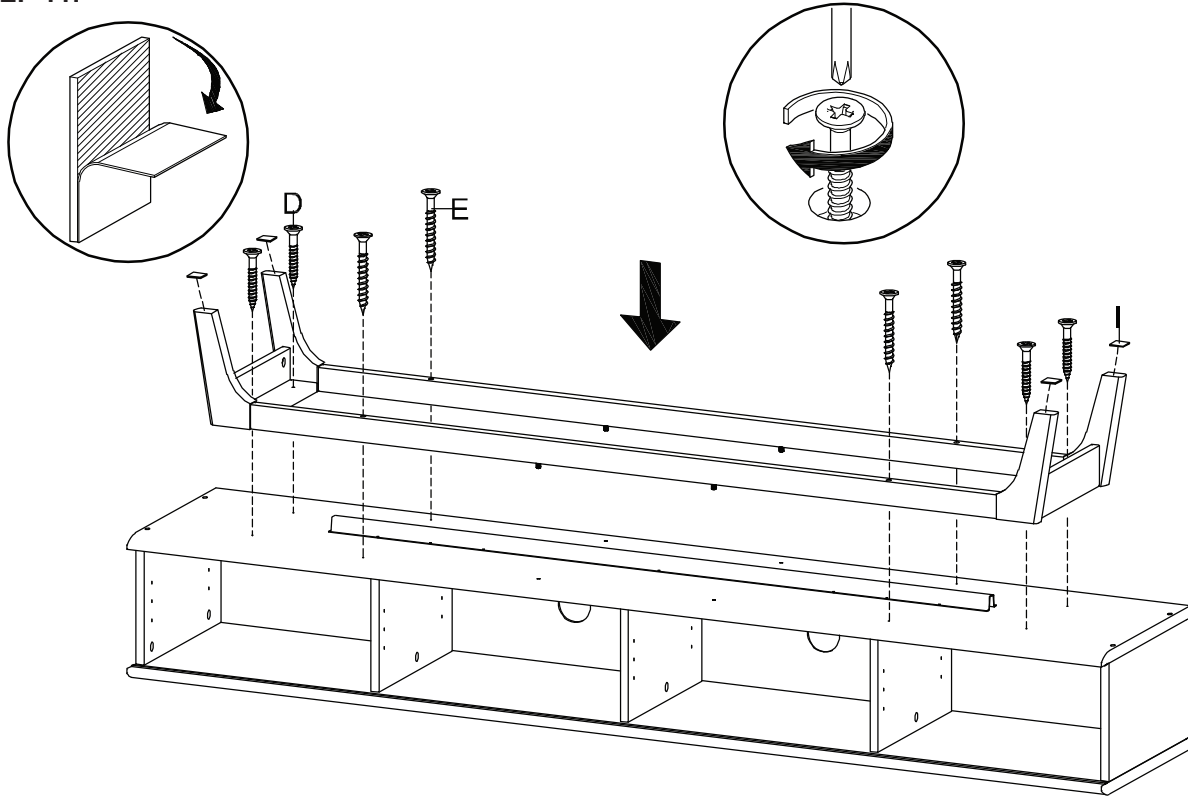

			
Dx4	Ex4	Lx4	Sx1

Hardware required.
Screwdriver not included

 
STEP 12:

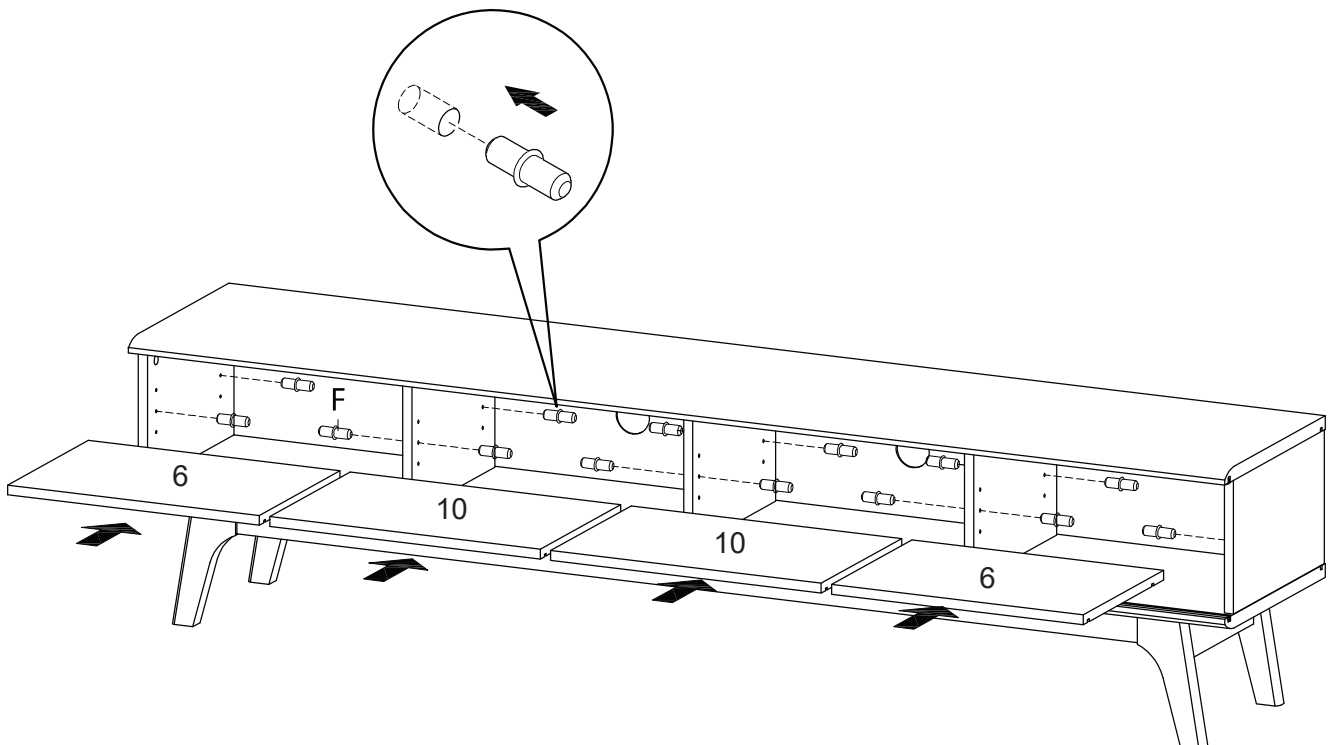


Fx16

Hardware required.

 
STEP 13:

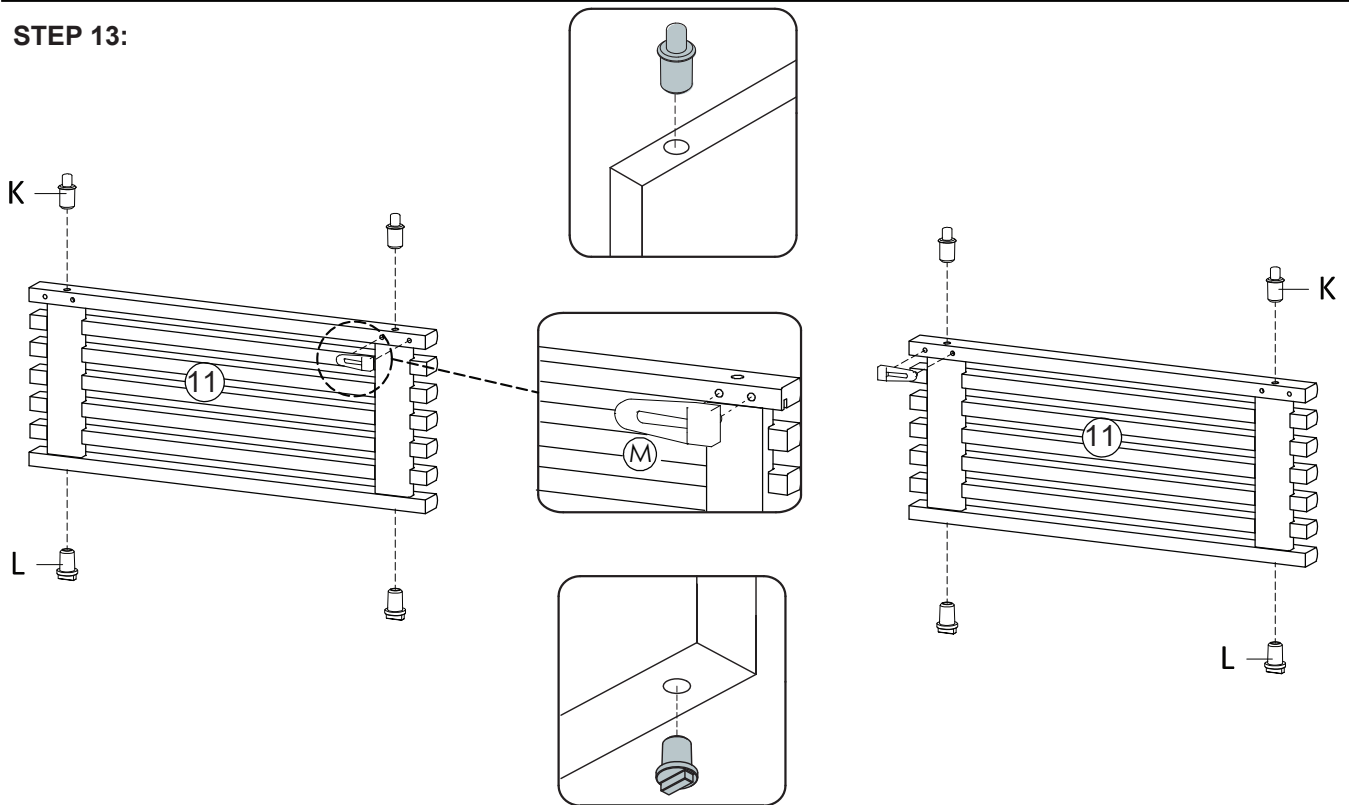

		
Kx4	Lx4	Mx2

Hardware required.


 
STEP 14:

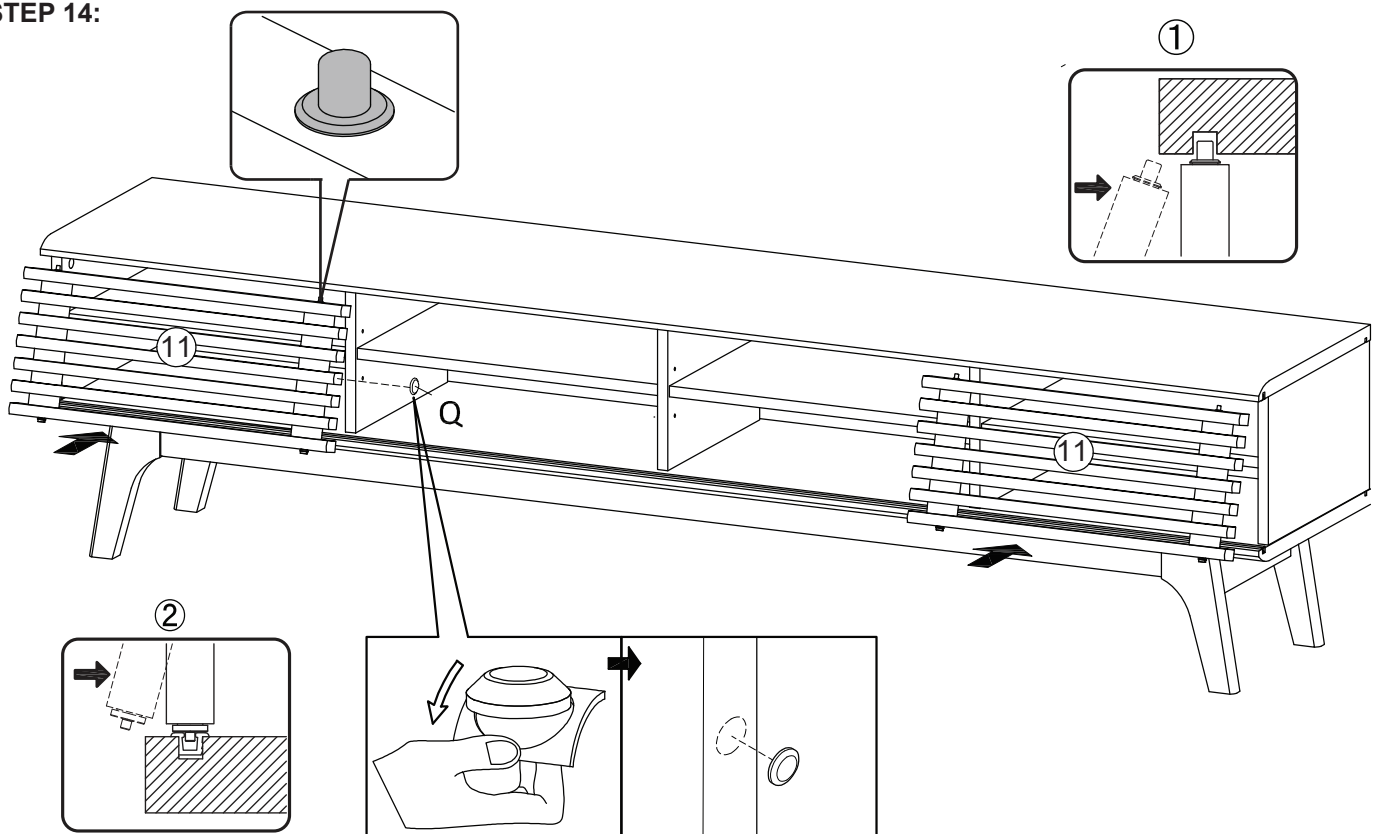


Qx1

Hardware required.

  
STEP 15:

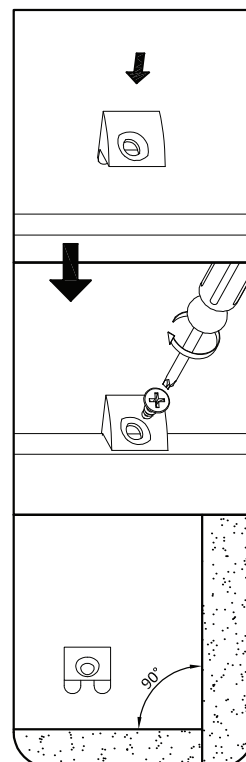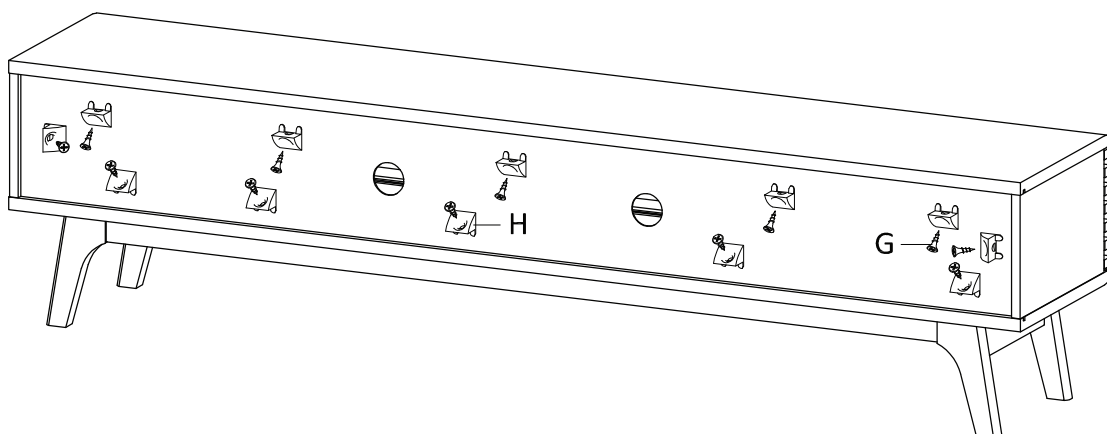

		
Gx12	Hx12	Sx1

Hardware required. Screwdriver not included

 STEP 16:

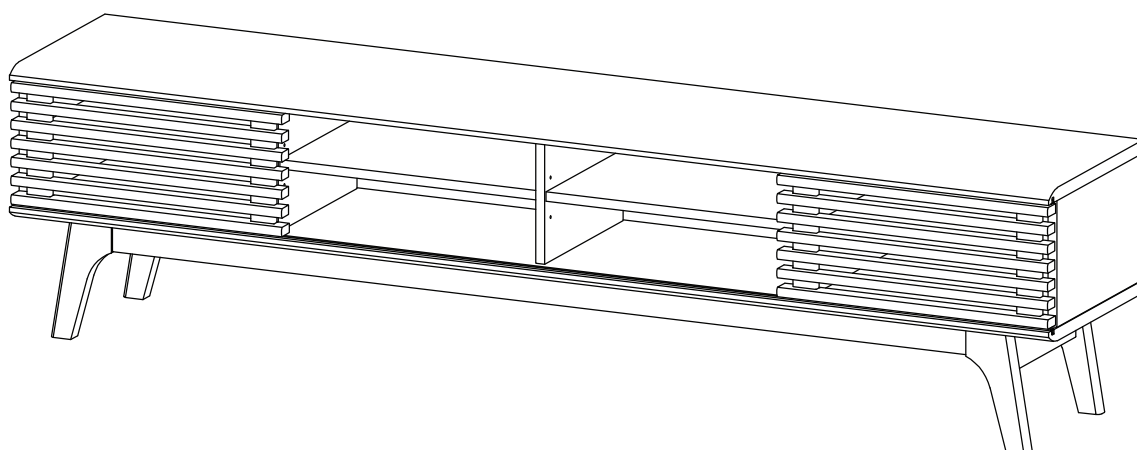

Assembly is complete. The TV Stand is ready to enjoy now !