

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.  
Remove wooden furniture from standing water. Dust regularly with small brush or vacuum  
Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening



# SAFAVIEH

## OUTDOOR

**Weight Capacity : 275 Lbs (single seat)**  
**550 Lbs (towperson seat)**

**Warning : Do not stand on daybed**

**Warning : Do not over torque bolts/screws**




## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
1	Daybed Back		1X
2	Daybed Side Left		1X
3	Daybed Side Right		1X
4	Daybed Bottom Left		1X
5	Daybed Bottom Right		1X
6	Daybed Foot Long		1X
7	Daybed Foot Short		1X
8	Daybed Cushion		1X
9	Daybed Back Cushion		2X
10	Pillow		2X
A	Allen bolt(M6x40 mm)		32X
B	Flat washer		32X
C	Allen key		1X

Model# PAT7500

Product Dimensions: 53.16"x61.02"x29.75" H

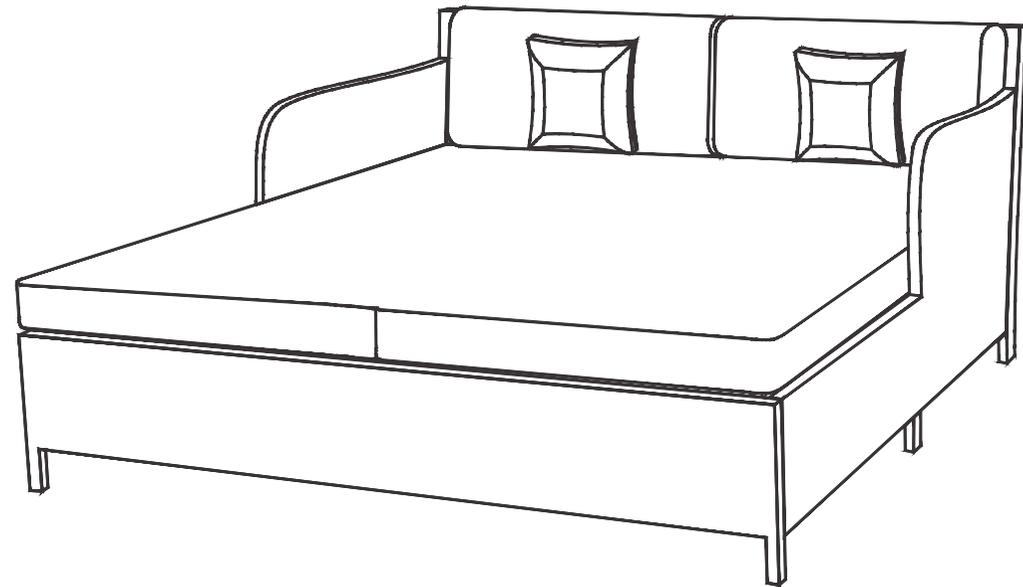

## PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 15 minutes.

Tools Required for Assembly (included): Allen Key


1

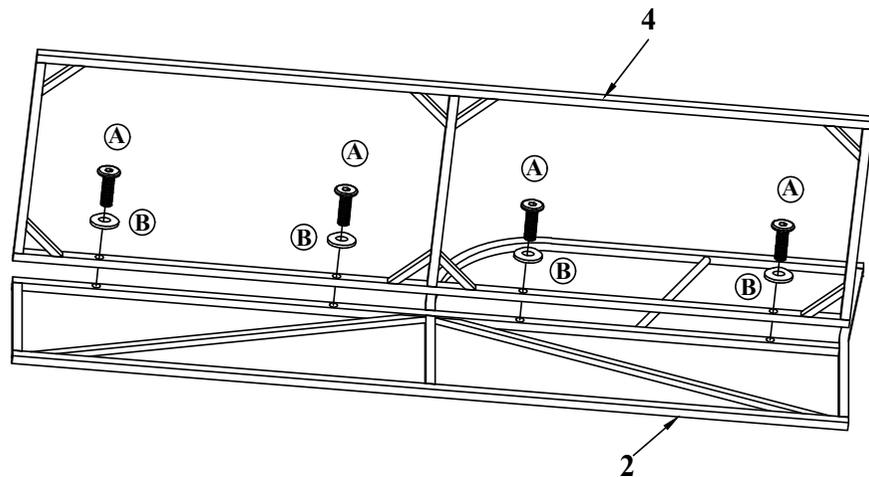

Step 1

Connect Daybed Side Left (2) & Daybed Bottom Left (4) tighten Bolt (A) with Allen key (C)


2

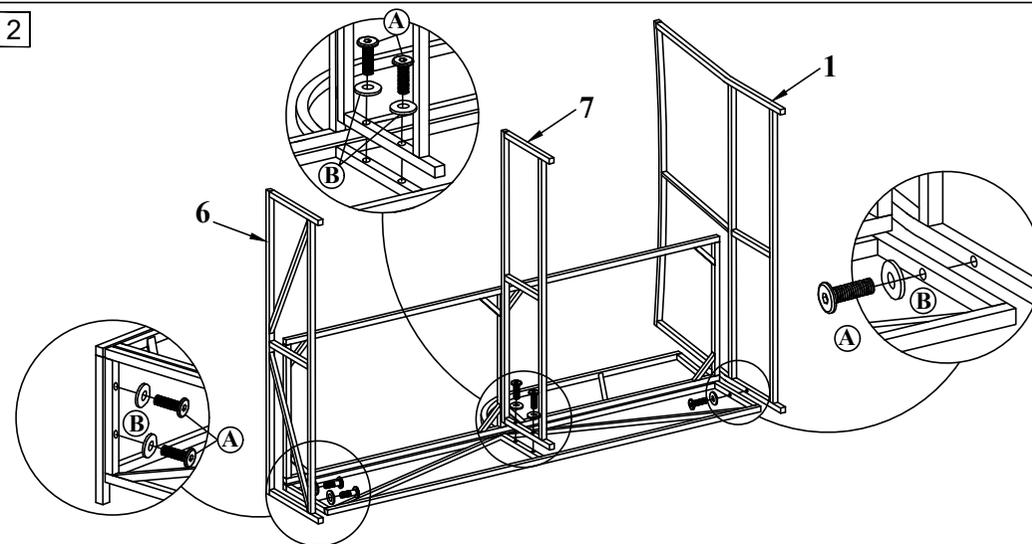

Step 2

Connect part from Step 1 & Daybed Back (1) & Daybed Foot Long (6) & Daybed Foot Short (7) tighten Bolt (A) with Allen key (C)


3

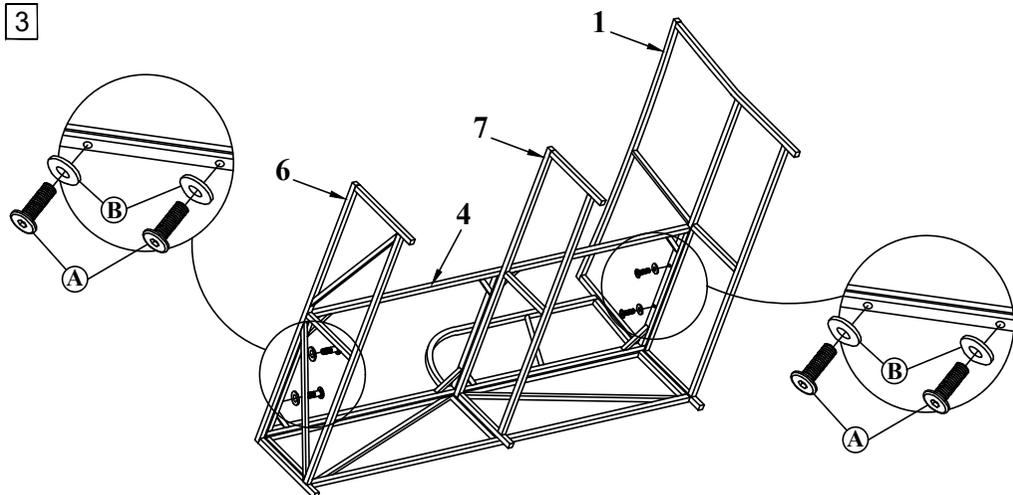

Step 3

Connect Daybed Bottom Left (4) & Daybed Back (1) & Daybed Foot Long (6) tighten Bolt (A) with Allen key (C)


4

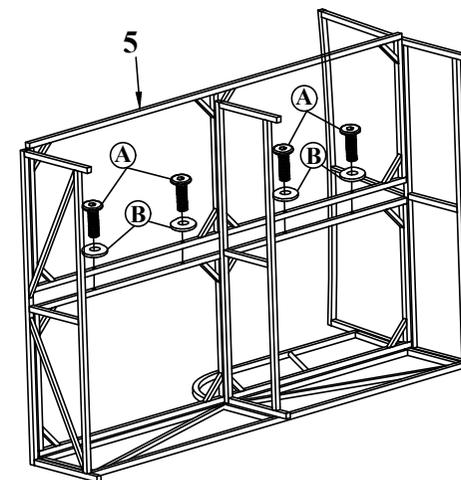

Step 4


Connect part from Step 3 & Daybed Bottom Right (5) tighten Bolt (A) with Allen key (C)

5

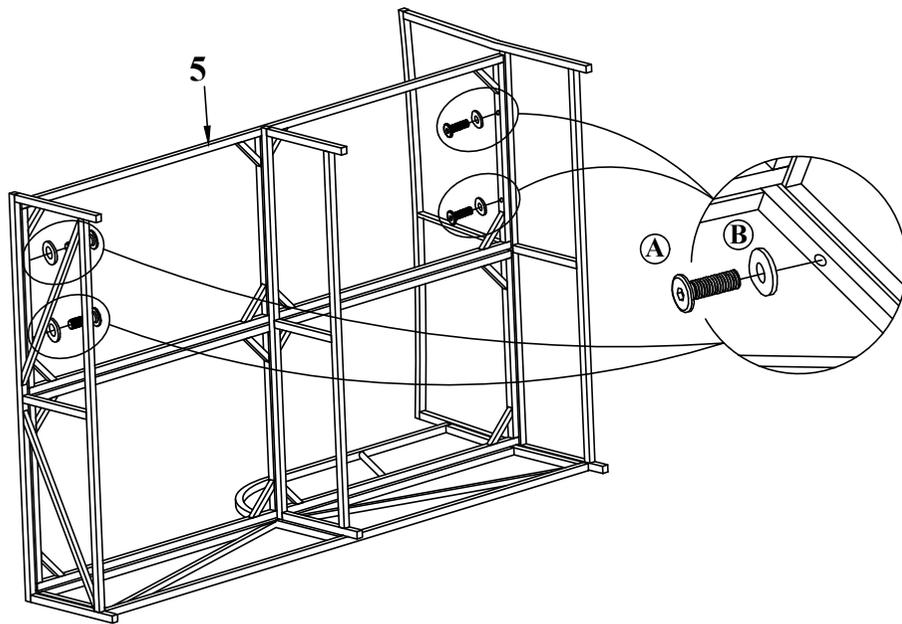


Step 5  
Connect Daybed Bottom Right (5) & Daybed Back (1) & Daybed Foot Long (6) tighten Bolt (A) with Allen key (C)

6

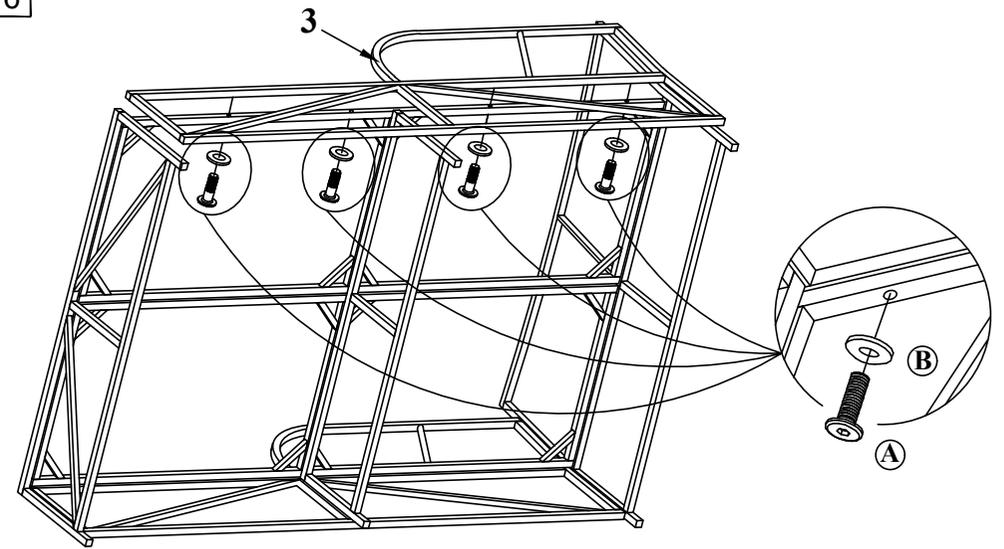


Step 6  
Connect part from Step 5 & Daybed Side Right (3) tighten Bolt (A) with Allen key (C)

7

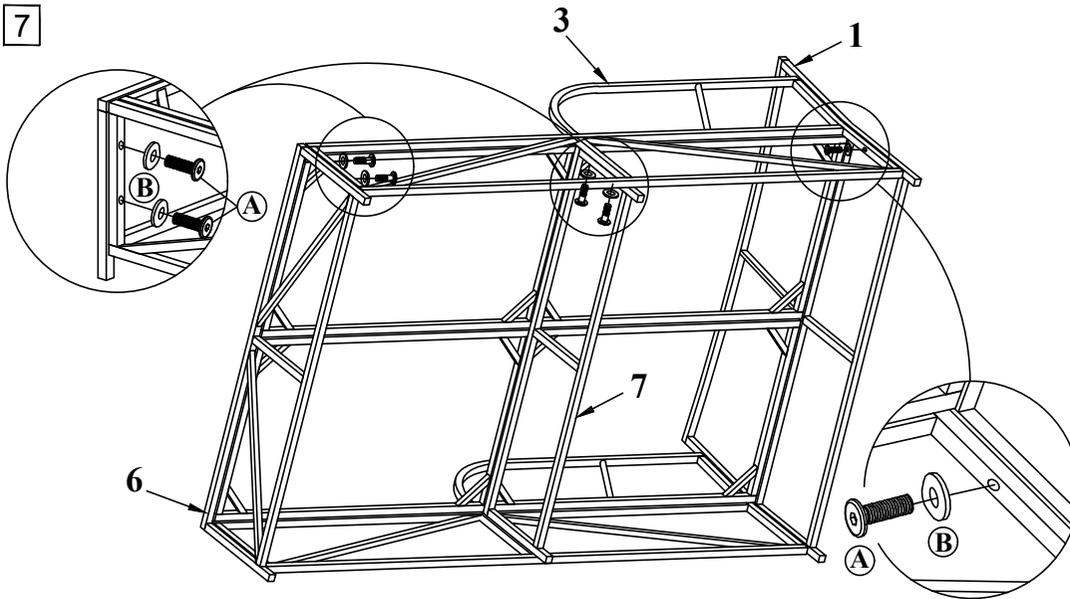


Step 7  
Connect Daybed Foot Long (6) & Daybed Back (1) & Daybed Foot Short (7) & Daybed Side Right (3) tighten Bolt (A) with Allen key (C)

8

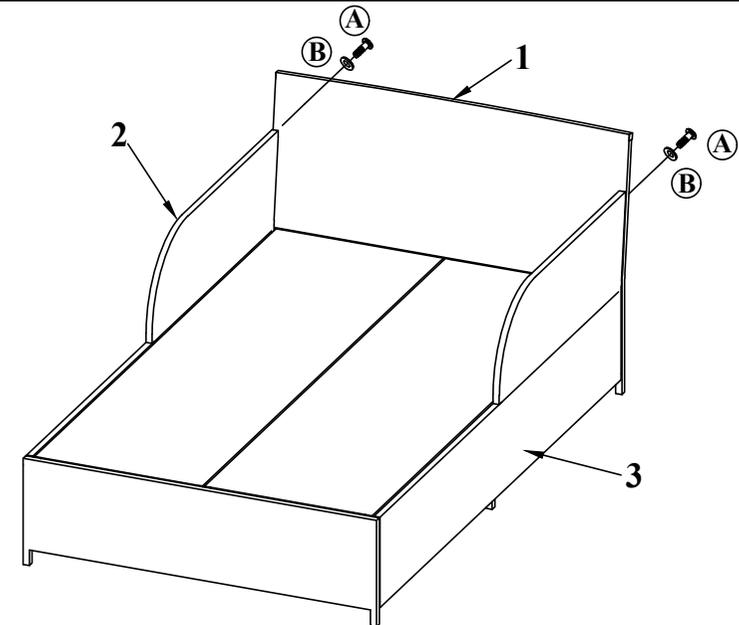

Step 8  
Connect Daybed Side Left (2) & Daybed Back (1) & Daybed Side Right (3) tighten Bolt (A) with Allen key (C)

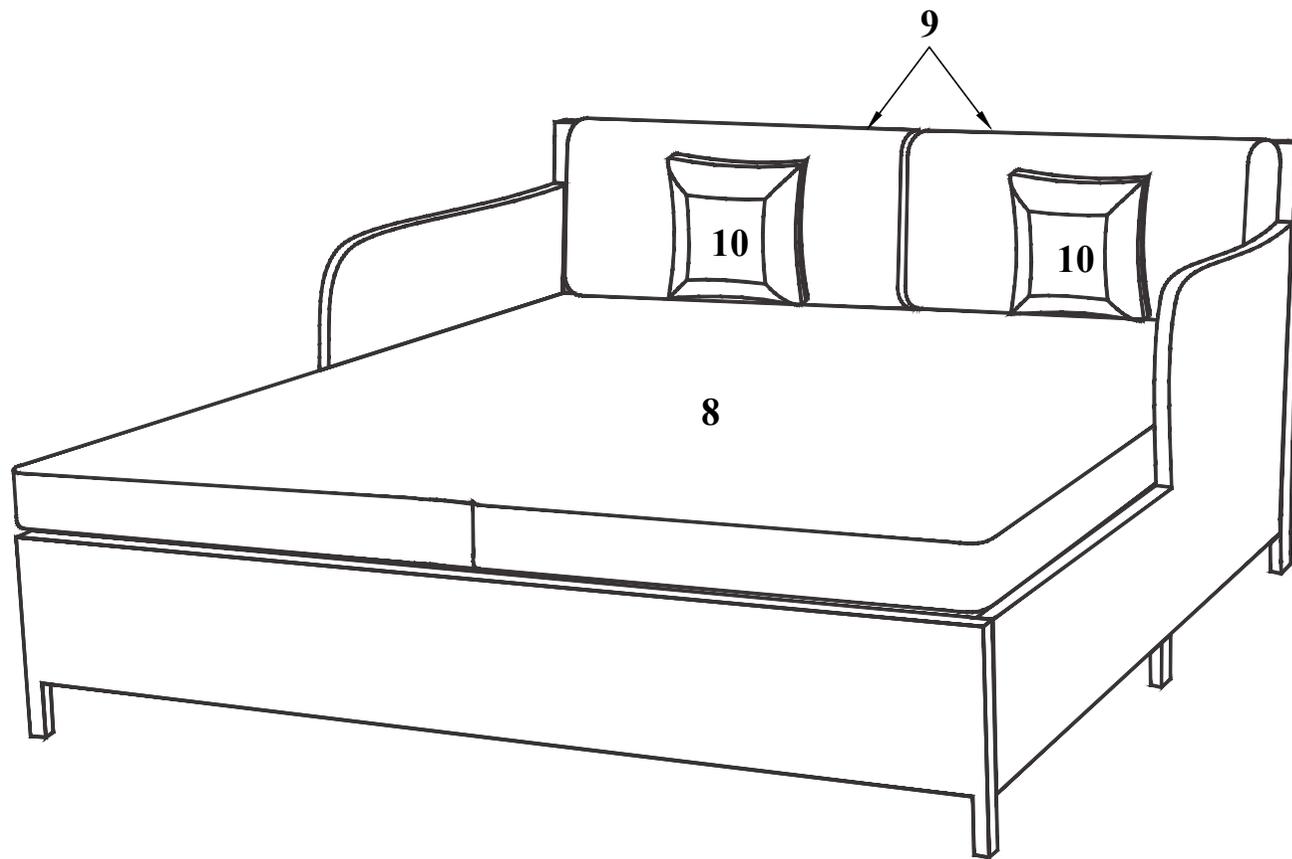

Step 9  
Put on Daybed Cushion (8), Daybed Back Cushion (9) & Pillow (10) to complete Daybed